

# Tech Note 053

## Ring Gear Reuse

Ref: TN053

Issue date: 12 Dec 2012

Issue number: 1

### Please Note:

1. Remove the ring gear from the original Dual Mass Flywheel.
2. Locate the ring gear by the heat shrink method to the Single Mass Flywheel supplied in this kit.
3. The spacer located between the underside of the crank bolt head and the Dual Mass Flywheel must be removed and placed in the same position on the Single Mass Flywheel.