

## Important Information

Wire spacer rings (like shown in the image below) are designed to aid clutch installation and should be removed following fitment of the clutch cover to the flywheel.

Where used, failure to remove this wire ring will result in clutch slip and/or premature clutch failure.

