

Toyota Landcruiser Fitted With A Self Adjusting Clutch Cover Assembly

Ref: TN026

Issue date: Oct 2014

Issue number: 2

Following installation of a self-adjusting clutch to FZJ80, FZJ100 & FZJ105 Landcruisers, the method of achieving the correct pedal height and removal of air from the release mechanism is as follows:

Whilst maintaining approximately 2500 RPM, operate the clutch pedal until gear selection is achieved. Then drive the vehicle a minimum of 10 kilometres operating the clutch at regular intervals.

During this period, the diaphragm will have reached the desired installed height and any excess air will have progressed through to the clutch master cylinder reservoir.

Additionally, if the bell housing is removed, ensure that the bell housing to engine block dowel pins are in place and the pins slide smoothly into the holes when refitting the housing.