

## Procedure To Attach Bearing To Carrier

Ref: TN054

Issue date: 20 Jan 2012

Issue number: 1

A release bearing and carrier is supplied in this clutch kit. It is necessary to attach the bearing to the carrier prior to fitment of the assembly to the release fork.

**Note: Retainer clips are not required for fitment of the bearing carrier to the release fork.**



Release bearing and carrier as supplied in this clutch kit.



Using a vice, press the release bearing onto the carrier. Ensure correct orientation of the bearing, i.e. bearing contact surface with radius should face away from carrier.