

Tech Note 074

Shipping Spacer Removal

Ref: TN074

Issue Date: April 2017

Issue Number: 2


The shipping spacer fitted to the pressure plate assembly in this kit must be removed after mounting the clutch and flywheel to the engine.

Failure to remove this spacer may result in noisy clutch operation, difficulty selecting gears and / or vehicle damage.



CONVENTIONAL TYPE CLUTCH COVER

Once pressure plate is bolted to the flywheel, turn the spacer to remove it.

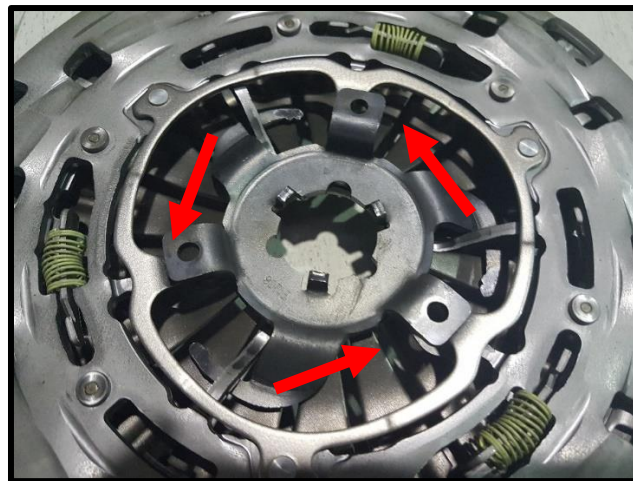

SELF-ADJUSTING TYPE CLUTCH COVER

Once pressure plate is bolted to the flywheel, turn the spacer anti-clockwise to remove it.

Once attached to the flywheel and the spacer removed, the clutch cover must remain affixed to the flywheel. If the clutch cover is removed or the bolts loosened, the clutch cover self-adjusting mechanism may be activated rendering the new clutch inoperable.